

ALLBROX® 4-6

Inner Doors




Allbrox® Inner Door

Part Number	Description
ALL-004/IN/DOOR	Allbrox 4 Inner Door
ALL-005/IN/DOOR	Allbrox 5 Inner Door
ALL-006/IN/DOOR	Allbrox 6 Inner Door

Allbrox® with PC Window

Part Number	Description
ALL-003/CLEARPC	Allbrox 3 with clear Polycarbonate window
ALL-004/CLEARPC	Allbrox 4 with clear Polycarbonate window
ALL-005/CLEARPC	Allbrox 5 with clear Polycarbonate window
ALL-006/CLEARPC	Allbrox 6 with clear Polycarbonate window

Allbrox® Inner Door Fitting Options

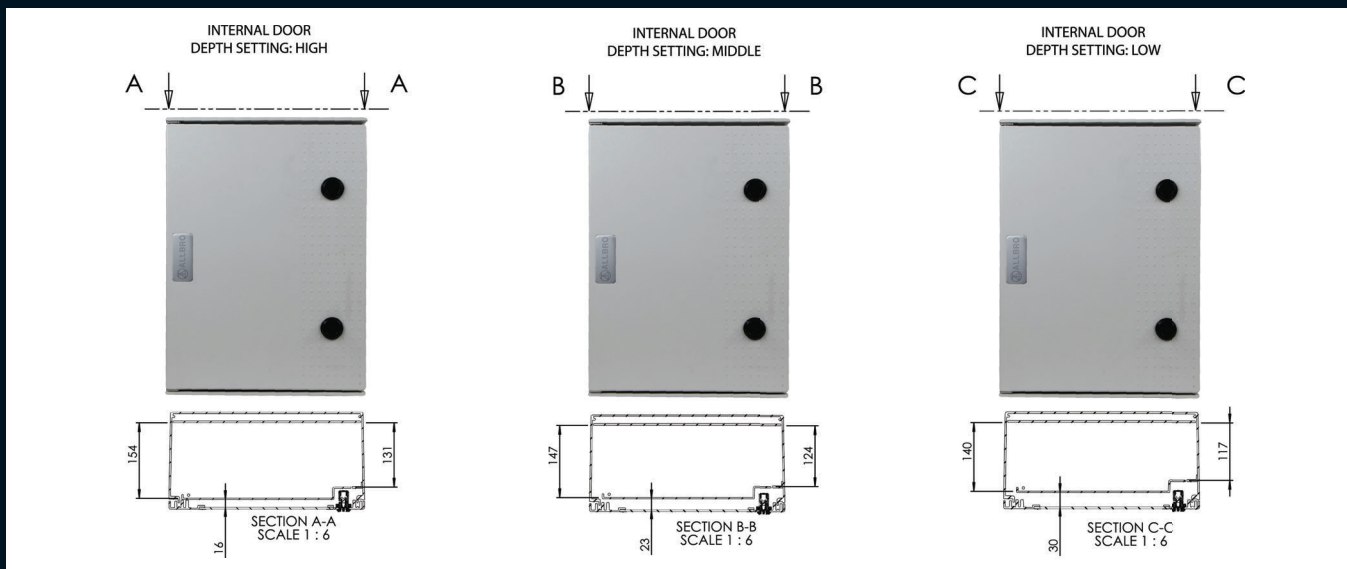

1) To remove or place the inner door in an Allbrox® simply pull the two hinge pins as indicated towards each other.



2.1) To remove the door, complete step 1 and pull the inner door towards yourself.

2.2) To place the inner door into the Allbrox® complete step 1 and let the hinge pins go once the pins are in-line with the hinge sleeve.

Enclosures

Hinges

Locks

Handles

Accessories

Rotary Operating Handles

Insulators

Transformer Equipment

Index